



1854420

Huntington Occasional Table-JV


Parts List

A.	Top Assembly	1 pc
B.	Post	1 pc
C.	Base Assembly	1 pc
D.	Allen Head Bolts	1 pc
E.	Lock Washers	1 pc
F.	Flat Washers	1 pc
G.	Allen Head Wrench	1 pc


* Please make sure that you have all the parts indicated above before you begin assembly of this item.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly.


Hardware Illustrations

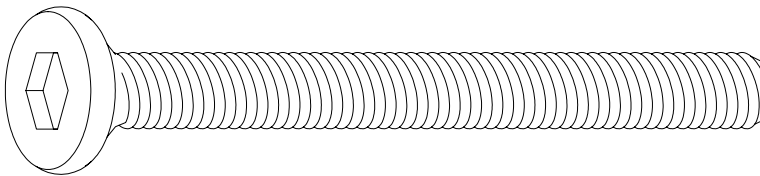

 D. Allen Head Bolt



E. Lock Washer

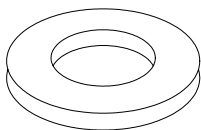

F. Flat Washer



1854420

Huntington Occasional Table-JV

Assembly Instructions

1. **Attach Post (B)** Place the Top Assembly (A) upside down on a soft surface. Align the exposed threads of Post (B) with the pre-threaded hole in the Top Assembly (A). Tighten by turning in a clockwise direction. See illustration.
2. **Attach Base Assembly (C)** Insert the dowels of Post (B) into the pre-drilled holes in the Base Assembly (C) so that the pre-threaded hole in the Post (B) is aligned with the pre-drilled hole in the Base Assembly (C). Secure with Allen Head Bolt (D), Lock Washer (E) and Flat Washer (F) using Allen Head Wrench (G). See illustration.

